


ND-450 Cabinet & ND450-MG-36EXT Installation Instructions

All Nordic Fiberglass cabinets and extensions are shipped separately. Bolt cabinet to extension before installation begins.

(Make sure the treated 4x4 is installed in the 36" extension)

1. Measure the bottom width and depth of the extension flanges.
2. Measure 10" down from the top of the cabinet locking system, mark that spot.
3. Then measure from that spot on the cabinet to the bottom of the attached extension, that's the maximum burial depth.
4. Dig a hole approximately 6" deeper than the maximum burial depth and 12" wider than the bottom flange dimensions of the extension.
5. Add 6" of gravel to the bottom of the hole, machine tamp and level it.
6. Close the cabinet lid and tighten the penta-head bolt(s).
7. Hook-up lifting slings to the cabinet's 4 eyebolts.
8. Lower the cabinet & extension into the hole.
9. Using a level, ensure that the cabinet is level. If not level, add or remove gravel, re-tamp and level again.
10. Backfill with loose dirt, no chunks of dirt or rocks, no machine tamping.
11. Finish grade approximately 6" below locking system. Unscrew the penta-head bolts and open the lid.

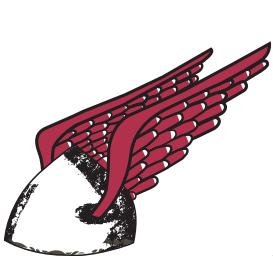

Nordic Fiberglass, Inc.
Quality Products for the Electrical Industry