


# Air-Filled Box Pad Installation Instructions:

1. Measure the bottom width and depth of the box pad flanges.
2. Measure down 6" below the top surface and mark that spot.
3. Then measure from that spot to the bottom of the box pad, that is the maximum burial depth.
4. Dig a hole approximately 6" deeper than the maximum burial depth and 12" wider than the bottom flange dimensions of the box pad.
5. Add 6" of gravel to the bottom of the hole, machine tamp and level it.
6. Place the box pad on the leveled gravel bed.
7. Using a level, ensure that the top surface is level. If not level, add or remove gravel, re-tamp and level again.
8. Back-fill with loose earth material.
9. Do not back-fill with chunks of frozen material or large rocks next to the ground sleeve.
10. Pack the back-fill material by foot tamping, no machine tamping.

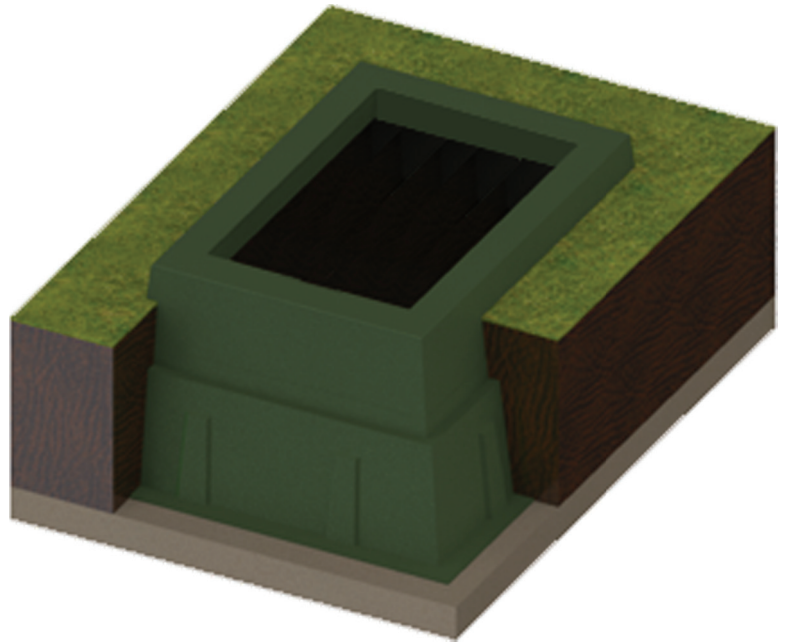

**Nordic Fiberglass, Inc.**