


# Nordic Cabinet Installation Instructions

## Single & Three Phase Sectionalizing Cabinet Installation Instructions:

1. Measure the bottom width and depth of the cabinet's flanges.
2. Measure 10" down from the top of the locking system, mark that spot.
3. Then measure from that spot to the bottom of the cabinet, that's the maximum burial depth.
4. Dig a hole approximately 6" deeper than the maximum burial depth and 12" wider than the bottom flange dimensions of the cabinet.
5. Add 6" of gravel to the bottom of the hole, machine tamp and level it.
6. Close the cabinet lid and tighten the penta-head bolt(s).
7. Hook-up lifting slings to the cabinet's 4 eyebolts.
8. Lower the cabinet into the hole.
9. Using a level, ensure that the cabinet is level. If not level, add or remove gravel, re-tamp and level again.
10. Backfill with loose dirt, no chunks of dirt or rocks, no machine tamping.
11. Finish grade approximately 6" below locking system.
12. Unscrew the penta-head bolts and open the lid.

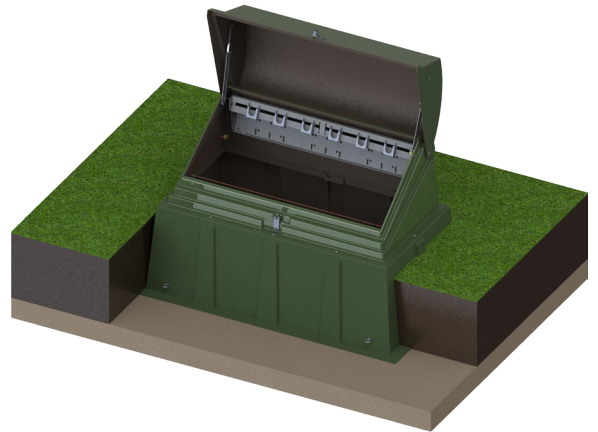

# Nordic Fiberglass, Inc.